Mini Travel Humidifier | USER GUIDE

Thank you for purchasing the Crane Mini Travel Humidifier. This ultrasonic humidifier has been manufactured to ensure safety and reliability.

SAFETY GUIDE

WARNING: READ AND SAVE THESE INSTRUCTIONS
Failure to follow all of the instructions listed below may result in electric shock, fire, and/or serious personal injury.

AVOID:
- Do not allow anyone unfamiliar with this product to use it unattended.
- Keep out of the reach of small children.
- Do not damage the cord or plug.
- Do not use when the cord or plug is damaged, or insertion to a power source is loose. *Failure to observe this precaution can result in electric shock, short circuit or fire.*

ATTENTION:
- Always insert plug securely into the power source
- Regularly clean the plug so that dust or sediment doesn't form on it.
- Unplug the cord from power source before cleaning this product. *Failure to observe this precaution can result in electric shock.*
- Do not touch plug with wet hands. *Failure to observe this precaution can cause electric shock or product damage.*
- Do not fully immerse the unit or pour water through the mist nozzle. *Failure to observe this precaution can result in electric shock or product damage.*
- Do not use in a wet area such as a bathroom or pool. *Failure to observe this precaution can result in electric shock or product damage.*

AVOID:
- Do not use this unit for any purpose other than described in manual or packaging.
- Do not overload power source
- Do not use if unit is damaged
- Do not use on unstable surfaces
- Keep out of the reach of small children
- Do not leave plugged in while not in use
- Do not place unit upside down when wet

SPECIFICATION

INCLUDED:
1x Ultrasonic Humidifier, 2x Internal Filters, 1x 120 V A/C Adapter, 1x Travel Base, 1x Carry Bag, 1x Manual

Voltage:
5V DC

SAFETY PRECAUTIONS

Failure to follow these instructions and other warnings can negatively impact the performance of the product or cause it to malfunction.

- Do not use anything other than room-temperature tap or distiled water.
- Keep on/off switch and power port from getting wet.
- Change water daily.
- Do not insert any foreign objects in the mist nozzle at the top.
- Unplug the product before carrying it around.
- Do not place near items that could be damaged by water or mist, such as furniture, walls, or clothes.
- Dry the main unit completely before storage.
- Store in a cool, dry place.
- Do not drop, hit, or otherwise subject this product to excessive shock.
- This product has been designed for personal use only. Do not use it for industrial use.

PARTS

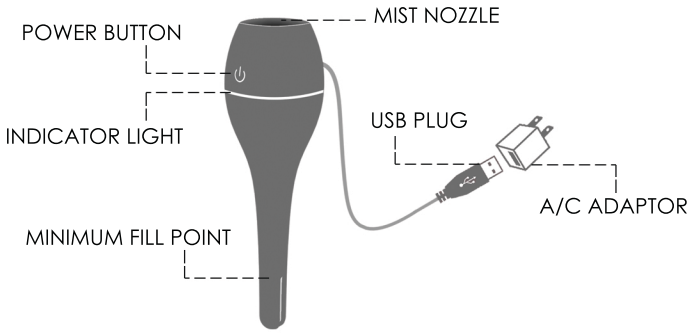

USAGE INSTRUCTIONS

1. Pour water into the Crane travel base provided or any standard sized cup until water reaches at least the water minimum fill point. TIP: Product consumes approx. 1 oz. of water per hour.
2. Place product in base as shown in image to the right. **Avoid** getting the on/off button or plug wet. **Do not** fully immerse in water.
3. Plug into power source using the USB plug or the A/C Adaptor plug.
4. Press the power button. Indicator light will illuminate and mist will soon emit from nozzle.
5. After use, press the power button again to turn power off.

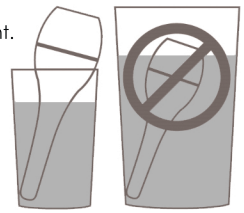

- After power on, it may take several minutes before mist will appear. This is normal and not a malfunction. To avoid this, turn on the power after soaking the unit in water for about five minutes.
- The product will stop producing mist when water level is low. To continue proper operation, add water to the base.
- It is recommended to find a sturdy, stable base to prevent tipping during use.

CARE & MAINTENANCE

ALWAYS unplug from power source before cleaning.
Do not immerse or pour water onto the on/off switch and power port of the unit.

- Wipe with a water-dampened cloth.
- Take out white internal filter by twisting above & below the indicator light to separate the top & bottom. Rinse with water, dry fully, then put it back inside the unit.
- Dry all parts before storing.

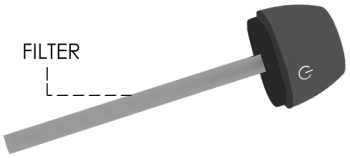

WARRANTY

This product is warranted to be free from manufacturing defects under normal use and conditions for 1 year. This warranty requires a copy of your dated proof of purchase.

Warranty is void if the defect is due to:
- accidental damage
- misuse
- abuse
- neglect
- improper repair or alteration by unauthorized persons
- failure to follow operating instructions provided

CUSTOMER SERVICE:
888-599-0992
customer-service@crane-usa.com

MORE INFORMATION:
please visit
www.crane-usa.com